

# Linear Luminaire Mounting/Hanging Hardware

Part Numbers: GFF-MH, W-VHOOK



Risk of  
Electric  
Shock


## CAUTION

- TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
- **WARNING:** ELECTRICAL SHOCK HAZARD
- MAKE SURE THAT THE POWER IS "OFF" AT THE CIRCUIT BREAKER BEFORE PROCEEDING

**NOTE:** We recommend the purchase and use of the Mounting Hardware when installing a 2-foot, 4-foot or 8-foot Narrow Body Linear Luminaire and the V-Hooks when installing a 4-foot Wide Body Linear Luminaire. Any luminaire that has been incorrectly installed by drilling, puncturing, piercing or any other means that will alter the integrity of the luminaire housing will void the warranty.




Mounting Hardware

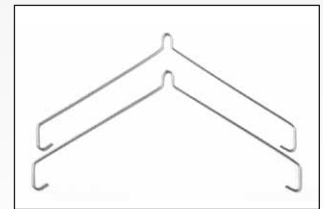

Hanging Hardware


### Narrow Body Mounting Installations — Use the Ceiling Mounting Brackets (P/N GFF-MH)

1. For Ceiling or Wall Mounting, use the four (4) holes on the "outbound" ends of the Mounting Bracket as a template, make a mark with an indicator tool, drill holes and use the appropriate size fastening hardware suitable for the surface where you will secure the Linear Luminaire. See Figure 1.
2. When suspending the Linear Luminaire from a vertical anchoring point using the Linear Luminaire Suspension System Kit, use and place the supplied "S" hook through the two (2) slotted center holes on the Mounting Bracket as shown. See Figure 2.
3. For Ceiling or Wall Mounting install the Linear Luminaire into the Mounting Bracket by centering the luminaire so the two (2) clips on the Mounting Bracket are positioned just inside the area where the Acetal (Plastic) latches or Stainless Steel latches are located. See Figure 3.
4. Now push the luminaire into the Mounting Bracket until it "snaps" into place. See Figure 4.
5. Ensure the Linear Luminaire Housing is securely supported in each Mounting Bracket. See Figure 4.

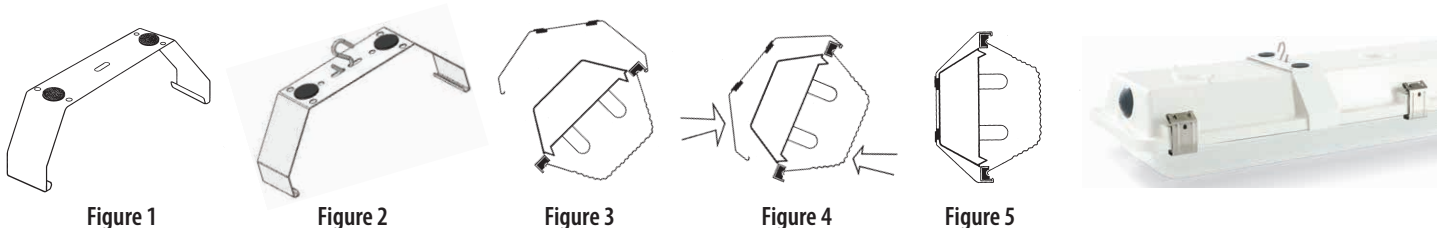

### Wide Body Chain Mounting Installations — Use the V-Hook Brackets (P/N W-VHOOK)

1. Ensure the hanging hooks or eyelets have been firmly attached to the ceiling or other flat overhead surface.
2. Insert the end of the V-Hook Brackets through the last link in the chain. See Figure 1.
3. Then insert each end of the V-Hook Brackets into each hole on the Hanger Brackets (four total). See Figure 2.

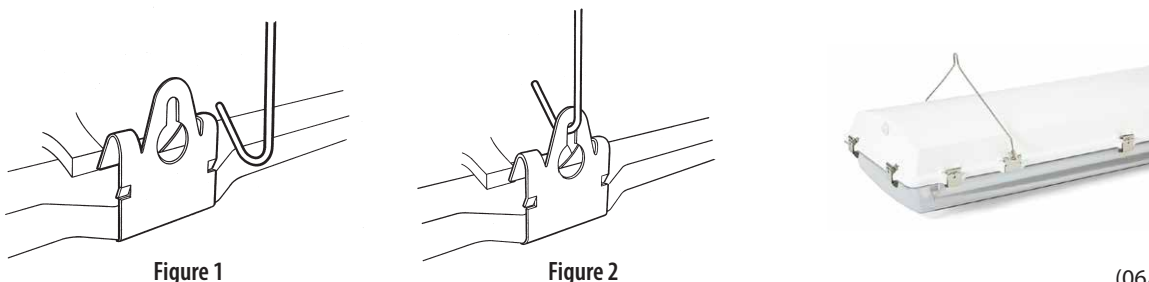

(06/16-BB)